SPECIFICATION

FOR

SWITCHING POWER SUPPLY

M/N: MPM-S125(-SB)

Revision H	istory	
Version	Date	Change Items
Rev. 01	June.16. 2017	Established.
Rev. 02	Aug.10.2017	Added Model no. coding and power factor.
Rev. 03	Aug.30.2017	Changed Mechanical drawing.
Rev. 04	Mar.12.2018	Changed EMC and Safety Approvals.



120W Medical AC / DC

















FEATURES

- √ 120W single fanless output, optional 5Vsb ON/OFF and PG /
 PF function with –SB model.
- ✓ Max. 135W with 13.6 CFM force air-cooling.
- ✓ Designed to meet IEC 60601-1-2 4th ed. EMC.
- Designed to meet medical standard EN / UL 60601-1 3.1 Edition.
- ✓ Class II design, can be used for homecare equipment.
- Meets EMI CISPR/FCC class B without any metal plate shielding.
- ✓ 2 x MOPP
- ✓ No load power consumption is less than 0.3W at input 115VAC.

Models & Ratings

Model Number	Wattage (Rated / Max)	Output Voltage		Min. Current	Rated Current	Max. Current
MPM-S125	120 W / 135 W	V1	+24 V	0 A	5 A	5.6 A
MPM-S125-SB	120 W/ 135 W	V1	+24 V	0 A	5 A	5.6 A
	120 00/ 135 00	V2	+5 V	0 A	0.5 A	0.5 A

Total Output Power: Max. 120W convection cooled, above 121~135W with 13.6 CFM forced air-cooling at 50°C environment temperature. Please see detail performance curves as below.

Note:

1. Model no. coding:

MPM-S12 X - Y - Z







Z=	Input Connector Type	Output Connector Type			
blank	Molex Type Connector or equivalent	Molex Type Connector or equivalent			
J	JST Type Connector or equivalent	JST Type Connector or equivalent			
Please refer to paragraph 8 for detail.					

	X =	Output (V)
\bigcirc	3	+12
	5	+24
	7	+36
	6	+48

	_	
	Y =	Output set
(2)	Blank	Single output
_	SB	With +5Vsb & remote on/off function and PG/PF signal

Summary

Characteristic	Minimum	Typical	Maximum	Units	Notes & Conditions	
Input Range	85	115 / 230	264	VAC	Universal input range.	
Input Frequency	47	50 / 60	63	Hz	AC input.	
Efficiency		90		%	At input 230VAC, rated load, 1.0 hr. warm up.	
Operation Temperature	-20		+70	°C	Derate linearly from 50°C, become 50% load at 70°C.	
Weight		270		g	-SB model is 280g.	
Dimensions	127 (L) x 76.2 (W) x 40.7 (H) mm, Tolerance +/- 0.5mm.					
EMC	EN 55011, EN 60601-1-2, EN 61000-3-2, EN 61000-3-3, IEC 61000-4-2, IEC 61000-4-3, IEC 61000-4-4, IEC 61000-4-5, IEC 61000-4-6, IEC 61000-4-8, IEC 61000-4-11					
Safety Approvals	IEC 60601-1, I	EN 60601-1				



120W Medical AC / DC

Input					
Characteristic	Minimum	Typical	Maximum	Units	Notes & Conditions
Input Voltage	85	115 / 230	264	VAC	Universal input range.
Input Frequency	47	50 / 60	63	Hz	AC input.
Input Current			3.0 / 1.5	А	Nominal AC Input Voltage (115VAC/230VAC), rated load.
Inrush Current			30 / 60	А	Nominal AC Input Voltage (115VAC/230VAC), one cycle at 25°C cold start.
Leakage Current		100 / 300		μ A	Normal Condition / Single Fault Condition.
No-load power consumption		0.3 / 0.5		W	Nominal AC Input Voltage (115VAC/230VAC). Only with model MPM-S125.
Power Factor		NA			
Input Protection	Dual non-user	serviceable inte	ernally located A	C input line fus	e. Fuse: 3.15A / 250VAC * 2pcs

Output							
Characteristic	Minimum	Typical	Maximum	Units	Notes & Conditions		
Output Voltage		24		VDC			
Output Voltage		5		VDC			
Initial Set Accuracy		±1		%	Initial setting accuracy is adjusted at input 115VAC and output at 60% rated load.		
Minimum Load		0		Α			
Start Up Delay		1.5 / 1.0		Sec.	Time required for initial output voltage stabilization. Nominal AC Input Voltage (115VAC/230VAC), rated load at 25°C.		
Hold Up Time	12 / 50	16 / 70		mS	Nominal AC Input Voltage (115VAC/230VAC), rated load.		
Line Regulation		±0.5 ^(V1) ±0.5 ^(V2)		%	Less than ±1% at rated load with ±10% changing in input voltage.		
Load Regulation		±0.5 ^(V1) ±0.5 ^(V2)		%	Measured from 60% to 100% rated load and from 60% to 20% rated load (60% ±40% rated load).		
Ripple & Noise		240 ^(V1) 50 ^(V2)		mV	Measured at rated road by a 20MHz bandwidth limited oscilloscope and each output is connected with a 10µF Electrolytic Capacitor and a 0.1µF Ceramic Capacitor.		
Overvoltage Protection		For some reason the power supply fails to control itself, the build-in over voltage protection circuit will shut down the outputs to prevent damaging external circuits.					
Overload Protection	Auto recovery	Auto recovery					
Short Circuit Protection	Fully protecte	Fully protected against output overload and short circuit. Automatic recovery upon of overload condition.					
Remote On / Off	Only with mod	del MPM-S125-S	В.				
Remote Sense	N/A						




120W Medical AC / DC


Genera	ıl					
Cha	racteristic	Minimum	Typical	Maximum	Units	Notes & Conditions
Efficiency			90		%	At input 230VAC, rated load, 1.0 hr. warm up.
Isolation	IP to OP	4000			VAC	2 x MOPP
isolation	IP to Ground	1500			VAC	2 x MOPP (Screw head to primary)
Switching	Switching Frequency		<65		KHZ	
MTBF		680,000		hrs.	MIL-HDBK-217F at 25°C	
Power Good Signal When power is (Only with –SB model) within regulation			s turned on, the power good signal will go high 100 mS to 500 mS after all output DC voltages are on limits.			
Power Fail Signal (Only with –SB model) The power fail			signal will go lo	w at least 1 mS l	before any of the	e output voltages fall below the regulation limits.

Environmental					
Characteristic	Minimum	Typical	Maximum	Units	Notes & Conditions
Low temperature start up	-30			°C	Some specification parameters maybe exceeded until after 20 minutes warm up period. (Note 1)
Operating Temperature	-20		+70	°C	Derate linearly above 50°C, performance curves will be provided after testing.
Storage Temperature	-40		+85	°C	
Relative Humidity	5		95	%RH	Non-condensing.
Cooling	13.6			CFM	Forced-cooled > 120W
Operating Altitude		5000		m	
Vibration	0.26		6.09	G	Frequency Type: Sweep Frequency Frequency Range: 10~55 Hz Displacement: 1.0mm Sweep Rate: 60 minute / cycle Number of cycle: 1 cycle / axis Direction: X ,Y and Z axis

Note:

Derating curve

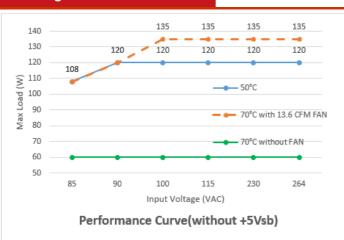

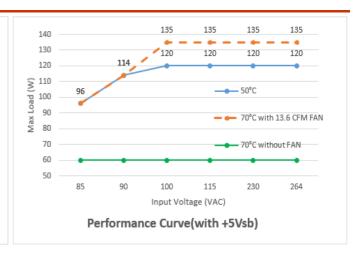



^{1.} To start up at low temperature, when the V_{IP} <115VAC, please set the rated load @ 10% for maximum; when 115VAC< V_{IP} <230VAC, please set the rated load @ 30% for maximum; when V_{IP}≥ 230VAC, there will be no specific limitation on rated load setting.

120W Medical AC / DC

EMC: Emissions

Phenomenon	Standard	Class	Notes & Conditions
Conducted	EN 55011 / CISPR 11 & FCC Part 18	В	Pass without enclosure. Pass with or without a metal plate below the
Radiated	EN 55011 / CISPR 11 & FCC Part 18	В	power supply.
Harmonic Current	EN 61000-3-2	A	
Voltage Flicker	EN 61000-3-3		

Note:

- 1. Above specification is applied with output equal or below 120W. For higher output power, please re-confirm with us.
- 2. Above specification is based on the test conditions of EN 55011 / CISPR 11 & FCC Part 18. If there is any question when the power supply is applied to the system, please contact us for assistance.

EMC: Immunity

Phenomenon	Standard	Criteria	Notes & Conditions
ESD	IEC 61000-4-2	A	±15KV air discharge, ±8KV contact discharge
Radiated	IEC 61000-4-3	A	10V/m, 80 - 2700MHz
EFT	IEC 61000-4-4	А	±2KV Line & PE, 100KHz
Surges	IEC 61000-4-5	А	L-N:±1KV
Conducted	IEC 61000-4-6	A	10V
Power Magnetic	IEC 61000-4-8	A	30A/m
Dips and Interruptions IEC 61000-4-11		A A/B A/B B	DIP: >95%, 0.5 cycle DIP: 30%, 25 cycles (Note 2) DIP: 60%, 5 cycles (Note 2) INT: >95%, 250 cycles

Note:

- 1. Above specification is applied with output equal or below 120W. For higher output power, please re-confirm with us.
- 2. The test result of input 240Vac / 100Vac is criteria A / B.

Safety Approvals


Safety Agency	Safety Standard	Notes & Conditions
TUV	EN 60601-1: 2006+A11+A1+A12	Designed to meet.
СВ	IEC 60601-1: 2005+CORR. 1: 2006+CORR. 2: 2007+A1: 2012	Approved (Medical 3.1 rd)
UL/cUL	ANSI/AAMI ES60601-1, CAN/CSA-C22. 2 No. 60601-1	Designed to meet (Medical 3.1 rd)




120W Medical AC / DC

Mechanical Details

SIZE: 127.0(L) x 76.2(W) x 40.7(H)mm, Tolerance +/-0.5mm.

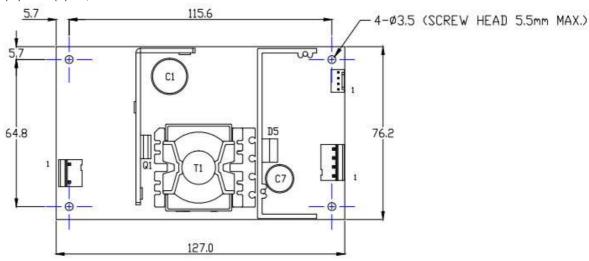

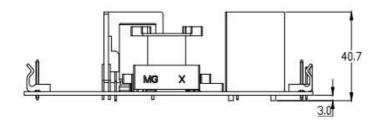

Input Connector CN1		
Pin 1	Line	
Pin 2	Empty	
Pin 3	Neutral	

Mates with Molex 09-50-1031 and Molex series 5194 crimp terminals or Equivalent.

When used model no. suffixed -J mates with JST VHR-3N and JST series SVH-21T-P1.1 crimp terminals or Equivalent.

Outut Connector CN2			
Pin 1	+V		
Pin 2	+V		
Pin 3	GND		
Pin 4	GND		

Mates with Molex 09-50-1041 and Molex series 5194 crimp terminals or Equivalent.

When used model no. suffixed -J mates with JST VHR-4N and JST series SVH-21T-P1.1 crimp terminals or Equivalent.

Signal Connector CN3			
Pin 1	+5Vsb		
Pin 2	GND		
Pin 3	ON/OFF		
Pin 4	PG/PF		

*Optional

Mates with Molex 22-01-1042 and Molex series 2759 crimp terminals or Equivalent.


When used model no. suffixed – J mates with JST XHP-4 and JST series SXH-001T-P0.6N or SXH-001T-P0.6 or SXH-002T-P0.6 crimp terminals or Equivalent.





120W Medical AC / DC


Performance


(Input voltage: 115Vac)

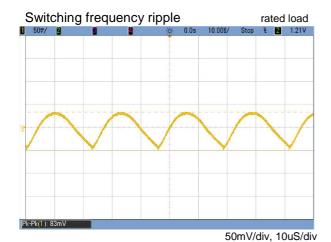


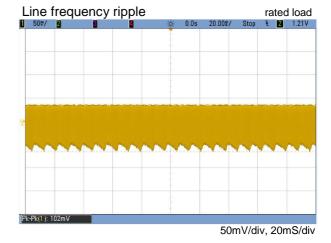

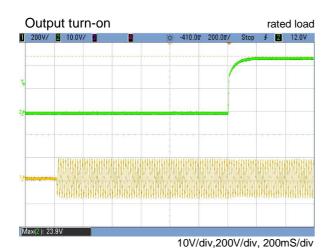


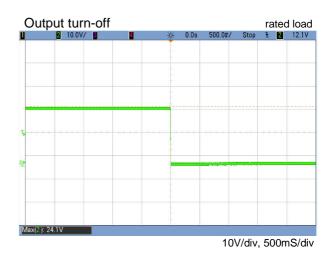

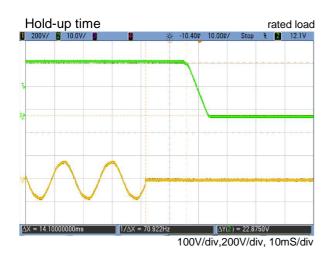

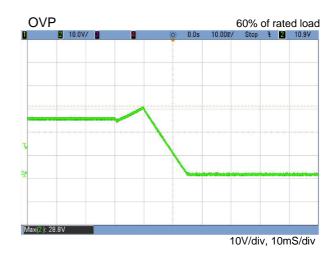



120W Medical AC / DC

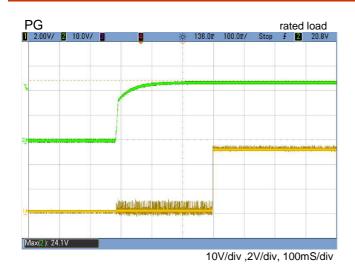




10V/div, 2V/div, 5mS/div

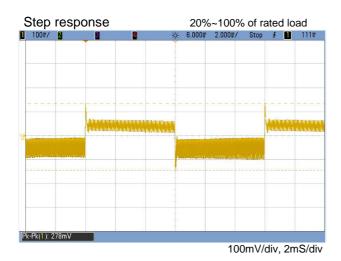

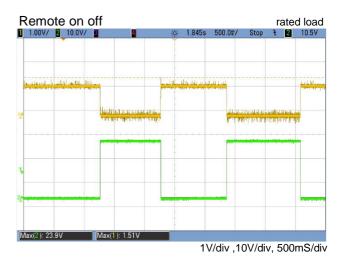

120W Medical AC / DC

138. 1 Frequency (MHz)

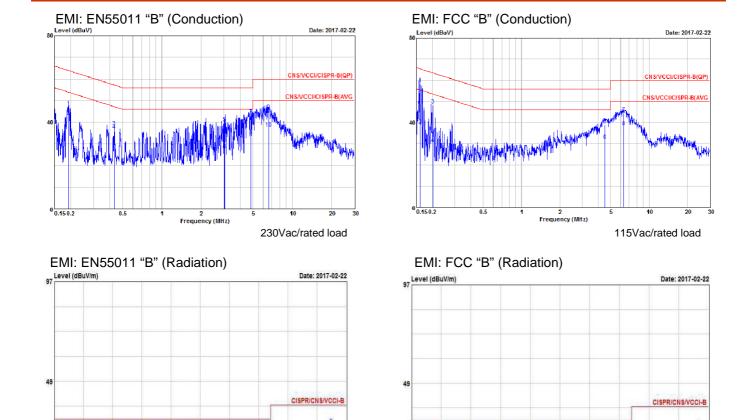

Thermal Considerations

In order to ensure safe operation of the SPS in the end-use equipment, the temperature of the components listed in the table below must not be exceeded.

Temperature should be monitored using J type thermocouples placed on the hottest part of the component (out of any direct air flow). See mechanical details for component locations.

230Vac/rated load

Temperature measurements at max. amb.			
Component	Max Temperature		
T1	110℃		
Q1	120°C		
D5	120°C		
C1	105℃		
C7	105℃		



115Vac/rated load